

Work Order ID 76869***76869***

Page 1

November-22-11 12:51:54 PM

Item ID: D350-636-218

Accept

N900040100

Setup Start

NS1

Revision ID:

Stop

NS2

Item Name: Skidtube RH, Deluxe

Start Date: 11/22/11 Start Qty: 1.00

1

Cust Item ID:

Required Date: 11/23/11 Req'd Qty: 1.00

1

Customer:

Reference:

Approvals:

Process Plan:

Date:

Tooling:

Date:

Run Start

NR1

QC:

Date:

SPC (Y/N):

Date:

Stop

NR2Sequence ID/
Work Center IDOperation
DescriptionSet Up/
Run Hours

Tool ID

Tool #

Plan
CodeAccept
QtyReject
QtyReject
NumberInsp.
Stamp

Draw Nbr

Revision Nbr

IIN-D350-636

1

0.00

0.00

0.00

0.00

0.00

0.00

100

100

DC

Document Control

Memo

Photocopy bluefile & type labels per PPPD350-636-218 CHG002

110

110

HandFinish

Hand Finishing

Assemble as per dwg

Memo

1- Assemble Toe kit, Wedge kit and Tow ring kit to D350-636-018 as per IIN-D350-636

120

120

QC

Quality Control

QC5- Inspect part completeness to step on W/O

Memo

W 11 12 01 ①
for MLJ 11-12-1
①

11/4/28

11 12 01 ①

Work Order ID 76869***76869***

Page 2

November-22-11 12:51:54 PM

Item ID: D350-636-218

Accept

N900040100Setup Start ***NS1***

Revision ID:

Stop ***NS2***

Item Name: Skidtube RH, Deluxe

Start Date: 11/22/11 Start Qty: 1.00 ***1***

Cust Item ID:

Required Date: 11/23/11 Req'd Qty: 1.00 ***1***

Customer:

Reference:

Approvals: Process Plan: Date:

Tooling:

Date:

Run Start ***NR1***

QC: Date:

SPC (Y/N):

Date:

Stop ***NR2***Sequence ID/
Work Center IDOperation
DescriptionSet Up/
Run Hours

Tool ID Tool # Plan Code Accept Qty Reject Qty Reject Number Insp. Stamp

150

0.00

150

Packaging

Memo

0.00

Packaging

Identify and pack for shipping as per PPP D350-636-218

Location: 73PPP rev: A

160

QC21- Final Inspection - Work Order Release

0.00

160

QC

Memo

0.00

Quality Control

11/22/11

11/22/11

ME 11-12-05

Picklist Print

November-22-11 12:51:53 PM

Page 1

Work Order ID: 76869

Parent Item: D350-636-218

Parent Item Name: Skidtube RH, Deluxe

Start Date: 11/22/11

Required Date: 11/23/11

Start Qty: 1.00

Required Qty: 1.00

Comments: IPP Rev:A 10.10.04 new issue DD verf:EC
DD verf:EC

IPP Rev:B 11.04.14 ecn11-553

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Qty per Kit	Total Qty	Qty Issued	Date Issued	Status
<i>nh</i> D350-636-018 Skidtube w/ Training Wearplates, RH		Manufactured	No		75354	110	Each	0.0000	<i>1</i>	1		<i>BR 11-11-29</i>	
<i>nh</i> D350-636-101 Toe Step, LH/RH		Manufactured	No			110	Each	14.0000	<i>1</i>	1			

Location Loc Qty Loc Code

FG120 14
~~67810~~ 1
68368 1
71606 12

nh
D350-636-105A
Wedge Installation

Manufactured No 110 Each 7.0000

Location Loc Qty Loc Code

FG120 *76303* 7
~~67317~~ 4
71604 3

nh
D350-636-109
Tow Ring Installation

Manufactured No 110 Each 3.0000

Location Loc Qty Loc Code


FG120 **75350** 3
74102 3

BR 11-11-29

BR 11-11-29

11/11/28

BR 11-11-29



THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

Date: 10.10.25

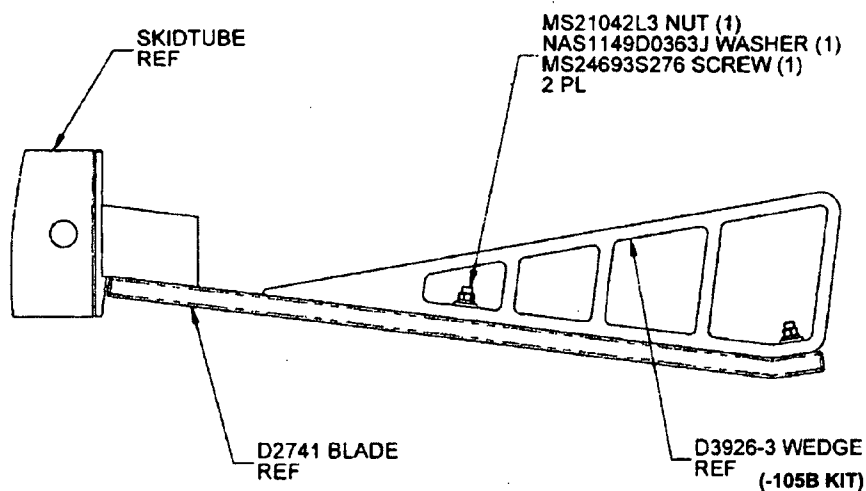
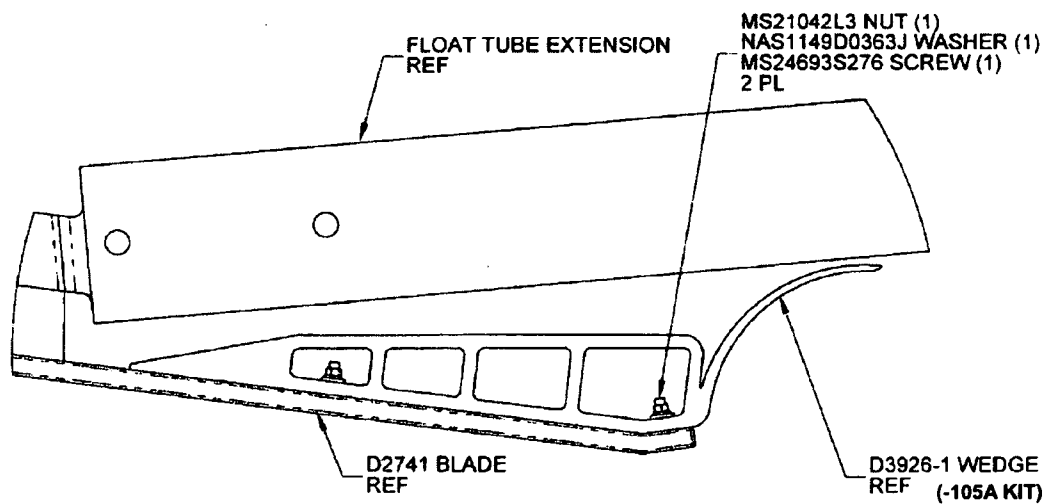
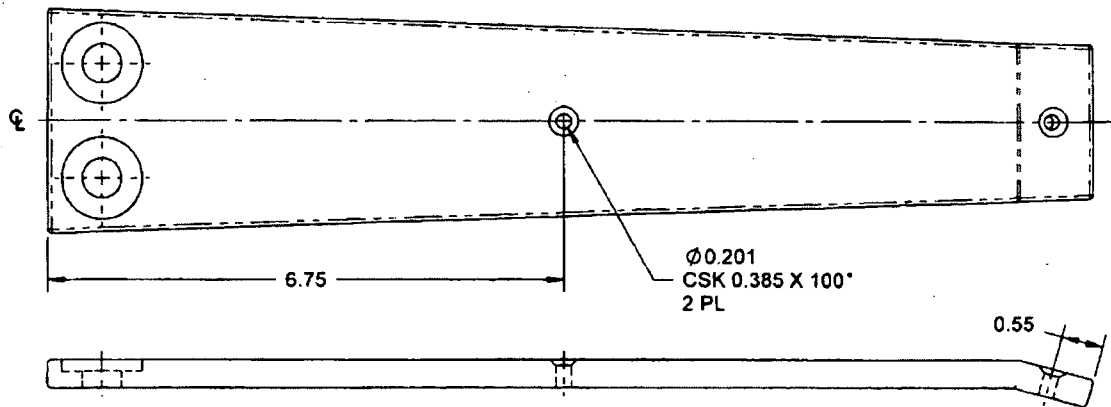


Figure 4: D350-636-105A/-105B WEDGE KIT INSTALLATION

• COPYRIGHT © 2010 BY DART AEROSPACE USA, INC. •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR
COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

Revision: I
Date: 10.10.25

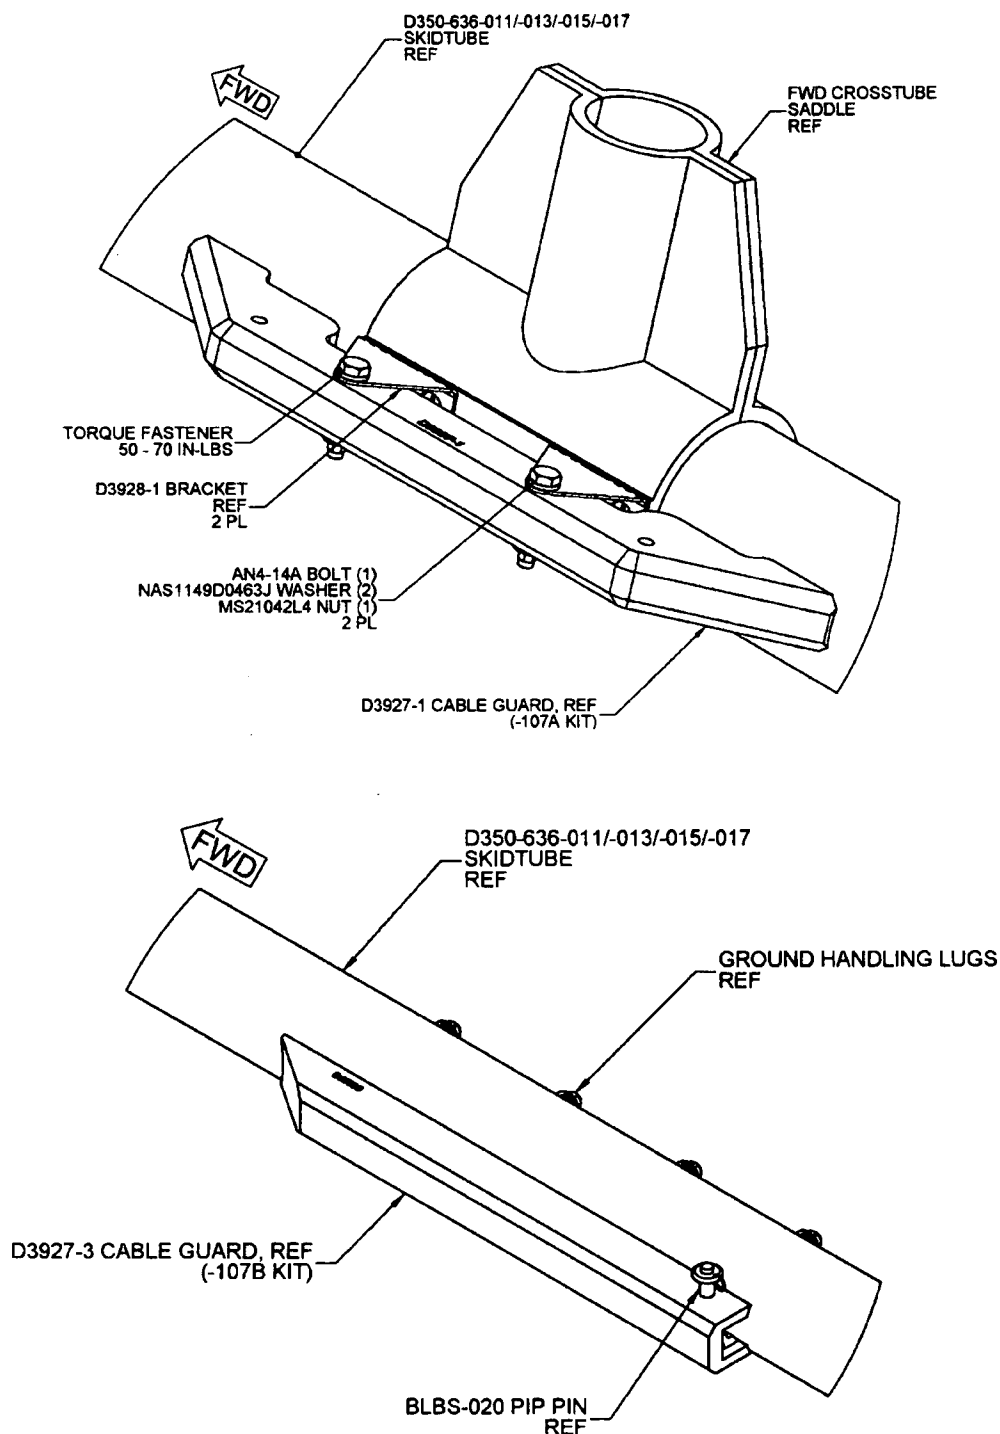


Figure 5: D350-636-107A/-107B CABLE GUARD KIT INSTALLATION

• COPYRIGHT © 2010 BY DART AEROSPACE USA, INC. •
THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR
COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.

Revision: I

Date: 10.10.25

9.0 PARTS LIST (D350-636-215/-216/-217/-218 KITS)

Item	Qty -215	Qty -216	Qty -217	Qty -218	Part Number	Description
	X				D350-636-215	SKIDTUBE INSTALLATION, LH, STD AERAZUR/APICAL CYLINDRICAL FLOAT COMPATIBLE DELUXE
		X			D350-636-216	SKIDTUBE INSTALLATION, RH, STD AERAZUR/APICAL CYLINDRICAL FLOAT COMPATIBLE DELUXE
			X		D350-636-217	SKIDTUBE INSTALLATION, LH AIRCRAUSER/ APICAL TRI-BAG FLOAT COMPATIBLE DELUXE
				X	D350-636-218	SKIDTUBE INSTALLATION, RH AIRCRAUSER/ APICAL TRI-BAG FLOAT COMPATIBLE DELUXE
	1				D350-636-015	SKIDTUBE INSTALLATION, LH, STD AERAZUR/APICAL CYLINDRICAL FLOAT COMPATIBLE
		1			D350-636-016	SKIDTUBE INSTALLATION, RH, STD AERAZUR/APICAL CYLINDRICAL FLOAT COMPATIBLE
			1		D350-636-017	SKIDTUBE INSTALLATION, LH AIRCRAUSER/ APICAL TRI-BAG FLOAT COMPATIBLE
				1	D350-636-018	SKIDTUBE INSTALLATION, RH AIRCRAUSER/ APICAL TRI-BAG FLOAT COMPATIBLE
	1	1	1	1	D350-636-101	TOE STEP KIT (LH/RH)
	1	1	1	1	D350-636-105A	WEDGE KIT
	1	1	1	1	D350-636-109	TOW RING KIT